Wireless Object Protection during opening hours



Piccolo®

Piccolo[®] Technical specifications

Additional modules:

, autonui modules.					
	Piccolo can be connected to detectors that function as interface between an external sensor and the wireless system, e.g. an inSpot with two input channels. By short-circuiting between the screw terminals an alarm will be sent.				
	Piccolo extensional module/I/O-interface with 8 potential free relay-outputs (C, NC, NO) and one input. The module is to be installed in the Piccolo PC interface/central unit. Or connected to Piccolo's serial RS485 interface via screw terminals.				
	Repeater which receives and transmits wireless signals so a large RF-distance for wireless detectors can be obtained.				
	Alarm receiver of wireless alarm signals on Piccolo. The unit is connected to Piccolo's serial RS485 interface via screw terminals. Max. 32 units per system (alarm receivers and/or I/O-interface). Max. 200 wireless detectors per alarm receiver.				
	GSM-modem to be installed in the Piccolo PC-interface/central unit. Thereby alarm signals can be forwarded as SMS-messages through the GSM-network.				
	Remote control to disconnect and connect Piccolo.				
Dimensions:	Central unit: 260x160x65 cm., 1000 grams. Alarm receiver: 150x120x45 cm., 300 grams. I/O interface: 15x12x4 cm, 265 grams. Repeater: 15x12x4 cm, 265 grams. ultraSpot: 95x42x21 mm., 50 grams. combiSpot: 79x39x9mm., 25 grams. infraSpot: 79x39x9mm., 25 grams. inspot: 60x45x24mm., 60 grams.				
Battery lifetime:	3,6 V lithium battery for combiSpot and infraSpot. in combiSpot: approx. 5 years. in infraSpot: approx. 3 years.				
	3,6 V lithium battery for inSpot and ultraSpot. in inSpot: 3 years. in ultraSpot: 1 ¾ years				
Power supply:	Piccolo can be connected to a 230 VAC power controller (UPS) whereby the system will function a few minutes after power failure				
PC requirements:	Windows 95, 32 Mbytes RAM, 800x600 monitor, USB-port or 1 free COM-port to connect the central unit.				
Cables:	Use serial cable (RS 232) or RS 232/USB converter. From PC to alarm receiver: 24 AWG twisted leads.				
Temperature range:	Central unit: -10°C +55°C ultraSpot: -10°C +55°C combiSpot: -10°C +55°C infraSpot: -10°C +55°C inSpot: -10°C +55°C				
	With Piccolo Starter kit and PC- software you can:		Some other advantages with Piccolo:		
	Connect and disconnect individual detectors or groups of detectors.	*	User friendly software on windows platform designed to install and maintain the system, receive and log		
<i>[5]</i>	Forward alarms to mobile phones or other units in the alarm system.		all alarms. Can be used simultaneously with other programs on your PC.		
P	Couple Piccolo to the security service.	× S	Constant surveillance of wireless detectors which send out ok-signals at		
A 0	Configurate local CCTV- and pagers. Adjust detector sensivity and check	×	short intervals. Configuration of user names and user		
J))))		Ě	rights. Configurate local CCTV- and pagers.		Profort as
•//	receiver conditions for RF-signal. Configurate external alarm signal on	Å	Possibility of enlargeing the system through an extensional module and,		Gunnar Clausens Vej 3 DK- 8260 Viby J
•	receivers (e.g. siren, bell, lamp). Monitor correct cable- and detector- installation, disconnection of cable, jamming of RF-signal		if required, repeaters. Display the object on the monitoring screen in case of alarm.	*	Phone +45 70233600 info@profort.com www.profort.com E N G I N E E R I N G