



### Set up a new unit

Name the unit, indicate the heat pump manufacturer and type in the mobile number of the SIM card.

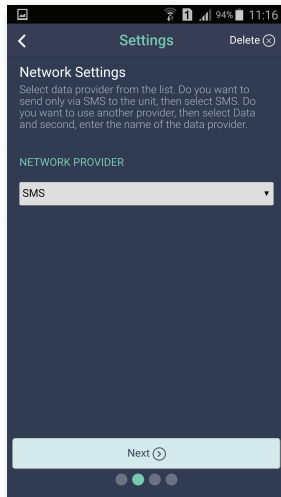


### Network settings

Indicate use of either text message or data.

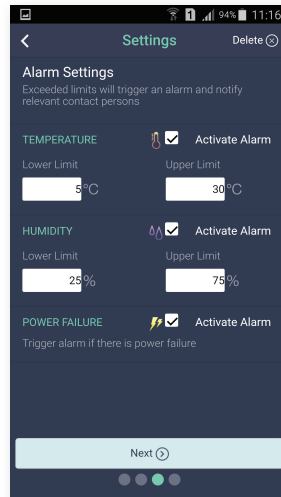

### Alarm settings

Indicate max. and min. limits for temperature and humidity. Indicate whether myHome should send an alarm in case of power failure.

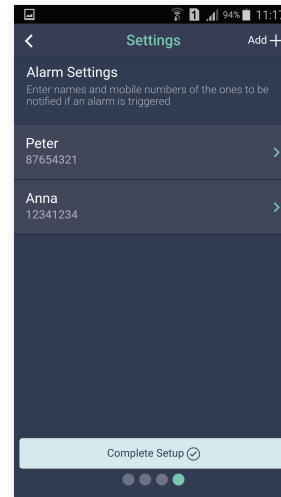


### Name recipients

Enter the phone numbers of recipients of alarms from myHome.

### Use myHome with app


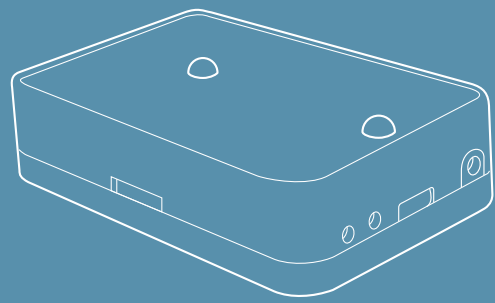
Download data from the unit and set temperature.

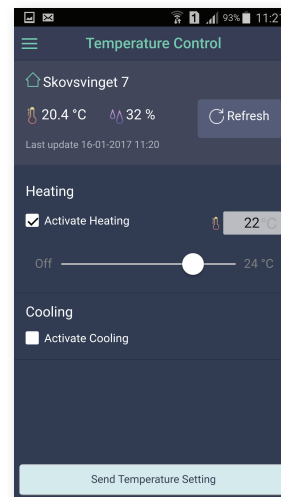

### Additional functions


You can set up more units from the myHome main menu, as well as using the calendar function to control the temperature - and access a log of temperature progression over time.



# User manual


myHome control unit for heat pumps

www.profort.com


## How to mount myHome:

### 1 Insert SIM card

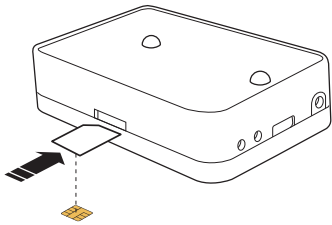


Push out the SIM card and insert it into the bottom of the myHome control unit. The chip should face downwards with the angled corner facing towards the opening.

### 2 Connect power supply

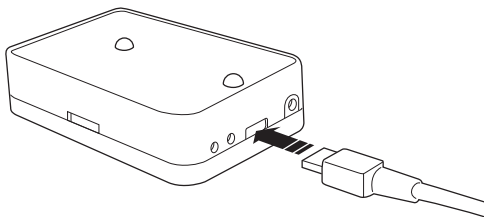

Connect the cable supplied to the unit, and insert into power socket. Turn on power.

### 3 The unit boots up ...

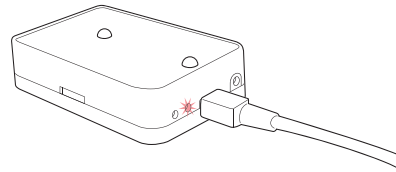


The small diode next to the power jack turns red. Wait for 10 seconds..

The diode flashing regularly indicates that the unit is set up correctly.


A continuous light or several quick flashes indicates that SIM card is missing or inserted incorrectly..

### 4 Place the myHome unit correctly

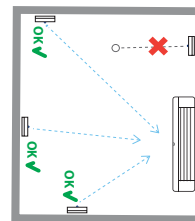

Make sure to place the myHome unit, so that the heat pump can "see" the infrared light of the unit.

### 5 Download the Profort myHome app

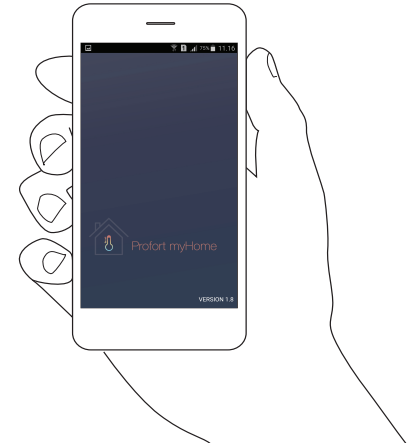

Download the FREE *Profort myHome* app for iOS or Android.

### 6 Control myHome with your smartphone

See how to use myHome on the following pages: